
# MGB RESTORATION -MGB TOURER AND MGB GT LUBRICATION CHART

Email this to a friend

Sun, 30 Nov 2014, 22:45

MGB lubrication chart for RHD and LHD except North America. For North American chart follow this link.

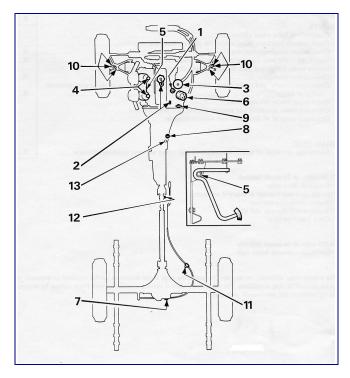

Note: Ensure that the vehicle is standing on a level surface when checking the oil levels.

# Weekly

1. **Engine:** Check oil level, and top up if necessary.

# Every 6,000 miles or 6 months

- 2. Engine: Drain and refill with new oil.
- 3. Engine Oil Filter: Remove the disposable cartridge, fit new.
- 4. **Carburetters:** Top up carburetter piston dampers.
- 5. **Accelerator:** Lubricate accelerator control linkage, cable and pedal fulcrum.
- 6. **Distributor:** Lubricate all parts as necessary.
- 7. **Rear Axle:** Check oil level, and top up if necessary.
- 8. **Gearbox and Overdrive:** Check oil level, and top up if necessary.
- 9. **Automatic Transmission:** Check fluid level and top up if necessary.

- 10. Front Suspension: (6 nipples)11. Hand Brake Cable (1 nipple)
- 12. **Propeller Shaft:** (1 nipple)

Give three or four strokes with a grease gun.

and mechanical linkage:

## **Locks and Hinges:**

Lubricate the bonnet release safety catch and all locks and hinges.

#### Every 24,000 miles or 24 months

13. **Gearbox and Overdrive:** Drain, clean overdrive filters and refill with new oil.

### Optional lubrication at 3,000 or 3 months

Engine: Check oil level and top up if necessary.
Wheels and Hubs: Lubricate wire wheel and hub splines.

For North America chart follow this link.

Email this to a friend

Home Page | Specifications

